
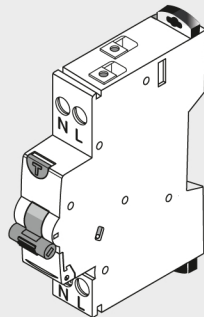


Insulation test to load cables can be performed in the bottom terminals and with the device switched off.


Insulation test to load cables connected to top terminals must be disconnected from device

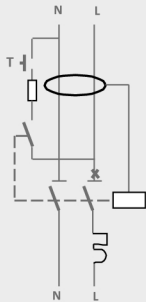

IEC 61009-1

WARNING!

Do not perform insulation test in top terminals

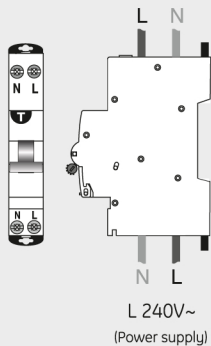

WARNING!

Do not perform insulation test in top terminals

TEST



1 JAN... 1 FE... 1 MAR...

Test Frequently

